



Unison Research® Unico DS

Quick Start User Instructions

1. Insert the CR2032 battery (not included) into the remote control.
2. Connect the audio input and output cables, then the power cord.
3. Turn on the Unico DS by pressing the “UN” logo on the front panel.
4. **Select the desired analog output** (XLR or RCA) by pressing the “OPT” button on the remote control, (RCA is the default setting).
5. To update the streamer, install the “mconnect” app and follow the firmware update procedure described in the user manual.
After the update, restart the unit
6. **Ethernet connection:** no configuration is required.
7. **Wi-Fi connection (Optional):** if you are using Wi-Fi dongle (not included), follow the Wi-Fi setup procedure described in the user manual.
Note: the Unico DS wi-fi configuration password is “password”
8. **Power Save mode:** press and hold the “Play” button on either the remote control or the front panel to put the Unico DS into “Power Save” mode.
9. **To exit “Power Save” mode** and reactivate the unit, press any button on the front panel or press the “Play” button on the remote control.
10. If a “TRIG” connection is used, the unit will automatically wake from “Power Save” mode as soon as it receives a remote turn-on signal from the “TRIG IN” input.

The remote control leads to different options:

Button	Function
Vol-	No function assigned.
Vol+	No function assigned.
Eject	Eject the CD transport.
Stop	Stop the current track (only for CD input).
Play/Pause	Play/Pause the current track (CD and NET input).
0 - ... - 9	Track selection (only for CD input).
Prev Track	Restart the current track or go to the previous track (CD and NET input).
Next Track	Go to the next track (CD and NET input).
Rewind	Rewind the current track by keep pressing the button (only for CD input).
Forward	Forward the current track by keep pressing the button (only for CD input).
	By pressing the button the device switch to different repeating mode (only for CD input):
Repeat	• shuffle reproduction; • repeat current track; • repeat all tracks; • normal reproduction.
Time	By pressing the button the device shows different time info (only for CD input): • elapsed time on current track;

	• elapsed time on the whole disc; • remaining time on disc.
Opt	Switch from RCA output to XLR output and viceversa
Source-	Switch to the previous input source.
Source+	Switch to the next input source.
Phase	No function assigned.
Mode	Switch off the display; pressing any button will resume the screen.
Filter	Switch between different digital audio filters.
In-	No function assigned.
Push	No function assigned.
In+	No function assigned.

Unico DS has 8 input sources selectable from the remote control (Source-/+):

- CD: CD transport;
- OPT1: digital optical input (lower);
- OPT2: digital optical input (upper);
- RCA: digital SPDIF input;
- XLR: digital XLR input;
- NET: streamer input;
- USB: USB input;
- BT: BT input.

Note: UNICO DS uses vacuum tubes in its audio circuitry. For optimal musical performance and sound quality, allow the unit to warm up for at least 15 minutes after power on.