

Installation Guide



	NU - VISTA PAM	
POWER STBY		INPUT DISPLAY

NU - VISTA PAM PSU
POWER STBY

Instructions for use

Thank you for purchasing the Musical Fidelity Nu-Vista PAM.

Based on our excellent Nu-Vista 800 circuit we decided to go all out "fully balanced" on the Nu-Vista range.

The Nu-Vista PAM features the tried and tested Nu-Vista stage featuring 6S51N nuvistors in a discrete class A amplifier buffer. This is followed by a balanced configuration circuit and balanced input high power, low distortion "bridged" output amplifier stage. The power stages have 2x 5 pairs of high power thermally compensated output devices for reliable and stable operation. Based on Titan 1000W stage, it has separate capacitors for bulk supply, and one each for output devices considerably reducing output impedance and improving dynamics. Chokes are added for further improved supply ripple and pulse current spike reduction. Bias is set for over 5W of initial class A operation thereafter the stage slides into class B operation at a point where the now much lower discontinuity is easier dealt with than "standard" crossover distortion.

The Nu-Vista PAM comes with its own dedicated external power supply, the Nu-Vista PAM PSU. To achieve better noise performance, we removed the AC mains power supply from the main unit and built it into another matching box. In this box we took advantage the extra space to set up inbuilt mains and output filtering. This quietens up the supplies and results in almost no mains-borne artefacts getting into the sensitive audio circuitry.


Used properly and carefully, it should give many years of outstanding musical reproduction.

Dust regularly with a soft duster or soft brush, but be careful when using cleaning or polishing agents - they may harm the surface finish.

The new Nu-Vista PAM and its PSU were a continued labour of love for Musical Fidelity. We are passionate about what we do and passionate about Nuvistor tubes as we have always been. We hope that you derive as much pleasure listening to the Nu-Vista PAM as we had creating it.

If there are any questions about the audio system, please consult the dealer, who is there to help and advise.

CUTAWAY VIEWS Showing Cylindrical Electrodes and Tripod-Like Supports

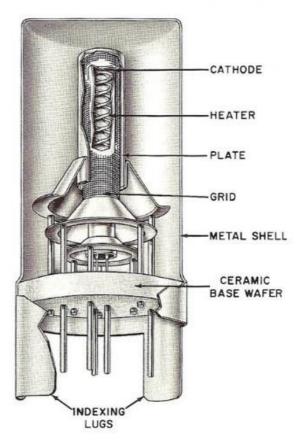

Typical Single-Ended Nuvistor Triode

^{*} UK English "valve" mentioned hereafter, refers to the 'electron valve' kind, also known as electron "tube" in other parts of the world.

CONTENTS

Section Page

Safety Information	Mains plug (UK only), modification warning	
General advice	Installation precautions	5
Installation	 Introduction, cleaning, installation, power connections, audio connections, spike feet 	6
Facilities and connections	Illustrations, front & rear panels	8
Operation	 Starting Switching Inputs Display Controls Power Off 	10
	– Wiring	11
Problems?	Basic fault finding	12
Specifications	 Product specifications 	13
Manual history Item disposal information		14

SAFETY INFORMATION

IMPORTANT! (U.K. only)

This unit is supplied in the U.K. with mains lead fitted with a moulded 16 amp plug. If, for any reason, it is necessary to remove the plug, please remove the fuse holder and dispose of the plug safely, out of reach of children.

It must not be plugged into a mains outlet.

The wires in the mains lead supplied with this appliance are coloured in accordance with the following code:

Green and yellow......Earth
Blue......Neutral
Brown....Live

WARNING - This appliance MUST be earthed

As the colours of the wires of the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in the plug, proceed as follows:

- The wire which is coloured green-and-yellow must be connected to the terminal in the plug which is marked with the letter E or coloured green or green-and-yellow, or by the earth symbol:
- The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red.
- The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black.
- If connecting to a BS1363 plug, a 13 amp fuse must be used.

WARNING:

ANY MODIFICATIONS TO THIS PRODUCT NOT EXPRESSLY APPROVED BY MUSICAL FIDELITY WHO IS THE PARTY RESPONSIBLE FOR STANDARDS COMPLIANCE COULD VOID THE USER'S AUTHORITY TO OPERATE THIS EQUIPMENT.

GENERAL ADVICE

Installation, Precautions & User Information

This new Nu-Vista PAM is designed and built to provide trouble-free performance, but as with all electronic devices it is necessary to observe a few precautions:

- · Heed all warnings shown on the back of the product.
- Only connect the Nu-Vista PAM to a mains outlet having the same voltage as marked at the back of the unit.
- Always ensure that when disconnecting and reconnecting your audio equipment the mains supply is switched off.
- Position the mains lead and signal interconnects where they are not likely to be walked on or trapped by items placed on them.
- Do not use near water, or place water-filled containers on the Nu-Vista PAM & PAM PSU, for example, a
 flower vase or potted plants. If water does spill inside, immediately pull out the mains plug from the
 wall socket and inform your dealer, who should then check the unit before further use. Entry of
 liquid into the Nu-Vista PAM and PAM PSU is dangerous, and may cause electric shock or fire
 hazard.
- This unit features a **BRIDGED** speaker output and should **NOT** be grounded on either speaker output terminal as both terminals are effectively "hot", i.e. carry signal. Please check if using any active "sub", electrostatic, or other non standard potentially grounded speaker types directly connected to the outputs of the Nu-Vista PAM. Consult speaker manual or supplier if in doubt.
- Do not place the unit near direct heat sources such as radiators, direct sunlight or other equipment.
- Do not remove any covers or try to gain access to the inside. There are no internal adjustments or fuses
 you can replace yourself. Refer all service work to an authorised Musical Fidelity agent.
 * Note: Unauthorised opening of the equipment will invalidate any warranty claim.
- Dust regularly with a soft cloth or soft brush but be careful when using cleaning or polishing agents they
 may harm the surface finish.

The electronics in modern hi-fi equipment is complex and may, therefore, be adversely affected or damaged by lightning. For protection of the audio system during electrical storms, remove the mains plugs.

If after-sales service is required, to help the dealer identify the Nu-Vista PAM & PAM PSU please quote the serial number located on the rear panel of the unit.

INSTALLATION

Introduction

Congratulations on the purchase of the new Nu-Vista PAM mono block power amplifier. Great attention has been paid to internal layout, isolating each circuit section to prevent possible interaction. The unit features a finely tuned and tweaked Nu-Vista valve design, for smooth sound coupled with low noise and virtually no distortion.

The power amplifier consists of two top quality power amplifiers for the absolute best in separation and imaging. Generously rated, they are enough to drive even the most demanding loudspeakers with ease. Low distortion and very quiet they will deliver all music types exactly as the artist originally intended.

The resultant performance achieved by this unit is among the best in the world. It has excellent signal to noise ratio, low distortion, wide bandwidth and dynamic range, with extraordinary resolution and fine detail.

Cleaning

Before cleaning the unit, switch off power at the mains switch and remove the mains plug from the wall socket. Clean the cabinets using a moist cloth. Using solvents, white spirit or thinners is not advised, as they could damage the surface finish.

Setting up

Position the Nu-Vista PAM and its PSU on a stable, horizontal surface where there is no risk of it being knocked.

Make sure ALL units involved are switched off and unplugged from mains supply before making or removing any connections. We recommend to place the Nu-Vista PAM PSU next to the PAM unit itself, with as much space between them, so that all power cables can be connected comfortably and there is no extra strain on the cables.

Important note:

During normal operation, the unit dissipates an appreciable quantity of power at all times, and it is important that it is well ventilated. The top and bottom are perforated to allow the smooth flow of heat through the unit. However, the unit must not be enclosed in a cabinet or placed where the ventilation holes are impeded as this could result in excessive heat build-up.

The Nu-Vista PAM must be protected from humidity – if the unit is moved from a cold place to a warm room, leave the unit for an hour or so to allow sufficient time for the moisture to evaporate.

Audio Connections

Inputs: The Nu-Vista PAM has single ended (RCA) line level and balanced (XLR) line level inputs. Choose the desired input to be used:

Unbalanced RCA Line Level Inputs:

Connect all RCA single-ended sources to relevant analogue inputs (see page 8 for more information). Use good quality fully connected (signal and ground) coaxial phono cables for all RCA signal connections. Take care with positioning all input leads, try to ensure that they are well shielded and kept as far away from mains and speaker leads as possible.

Balanced XLR Line Level Inputs:

Connect source balanced outputs to the Nu-Vista PAM balanced inputs using good quality XLR balanced leads. Recommended lead wiring is shown on P.8. Note some products simply connect "cold" input pin 3 to ground. This does no harm to unit, but may result in an audible reduction in signal level from this input and a slightly worse signal to noise ratio.

Note: in both input cases it is assumed that the driving preamplifier has a VOLUME CONTROL to allow setting of listening level. This is important as the Nu-Vista PAM has no control of its own.

Outputs: The Nu-Vista PAM has a single ended (RCA) line level and balanced (XLR) line level output. The output sockets allow loop through of the input signal, for example to pass on to a recorder, monitor, additional amplifier or active subwoofer.

Speaker Outputs: Connect a loudspeaker to the terminals on the back panel. See "WIRING" P.11 for more details.

Mains Power Input on Nu-Vista PAM PSU

Check the Nu-Vista PAM PSU back panel mains switch is set to "OFF". Connect the supplied mains lead to the 16A IEC socket on the back panel. Connect the other end to a mains power socket. Be sure to leave the mains switch in the "OFF" position.

CONTROL, Nuvistor PRE and PA Interconnects from Nu-Vista PAM PSU to Nu-Vista PAM amplifier unit

Connect the 4-pin XLR cable between the CONTROL output on the Nu-Vista PAM PSU and the CONTROL input on the Nu-Vista PAM amplifier.

Connect the 5-pin XLR cable between the Nuvistor Power output on the Nu-Vista PAM PSU and the Nuvistor Power input on the Nu-Vista PAM amplifier. This is powering the Nuvistor stage.

Connect both "Neutrik" cables between the POWER 1 and POWER 2 outputs on the Nu-Vista PAM PSU and the POWER 1 and POWER 2 inputs on the Nu-Vista PAM amplifier. This is powering the bridged power amplifier stages.

Important notes:

- Only switch the Nu-Vista PAM PSU on once ALL connections are made.
- Only connect or disconnect power cables when the ON/OFF switch on the Nu-Vista PAM PSU is set to OFF!
- If the Nuvistor Power cable is wrongly or not connected, the Nu-Vista PAS display will show "Output DC present" and mute the unit. Turn the Nu-Vista PAS and then the PSU off and check the cables again.

Trigger Input and Output

Triggering input and outputs are available to allow the amplifier to be turned on automatically by other equipment or turn on other equipment automatically when the Nu-Vista PAM is turned on. This is a 2-way 3.5mm jack on the back of the unit labelled "TRIGGER". It requires 5 to 12V (either polarity) to switch the amplifier on.

CAUTION!

This amplifier features a **BRIDGED** output and should **NOT** be grounded on either output terminal as both are effectively "hot". Please check if using any active "sub", electrostatic, or other non standard speaker types directly connected to the speaker outputs of the Nu-Vista PAM. Consult speaker manual or supplier/dealer if in doubt.

Most high quality speakers will comfortably cope with large power transients. By their nature, these are very quick and will present no thermal problems for a good commercial quality loudspeaker.

However please note that most loudspeakers are *not* designed for very high *sustained* listening levels. The Nu-Vista PAM is a very powerful amplifier and will faithfully deliver what is asked of it. If listening levels are set significantly higher than normal, it is possible that the loudspeakers could get into thermal problems and be damaged. Musical Fidelity will not be responsible for any loss or damage to loudspeakers.

Please take care with listening levels, which can damage hearing, and consider the noise suffered by others, such as neighbours.

Additional note-

If bi-amping, please ensure that all speaker shorting links linking treble and bass units are removed. Failure to do so may result in damage to connected amplifier(s). See loudspeaker instructions for more information.


Mounting optional Spike Feet

The Nu-Vista PAM and PAM PSU can optionally be used with spike feet. We recommend to ask a second person to help you lift the amplifier and PSU units for mounting the feet or felt pads.

If you want to use the standard mounted feet, you can attach the big felt pads to those feet (remove the small rubber feet first if necessary).


To mount the spike feet, screw the threaded rods into the spike feet so that the allen key side is inside the foot (this way, when you want to remove the foot from the amplifier again, you can unscrew the foot and then unscrew the threaded rod from the amplifier with an allen key, should it be too tight to unscrew by hand). Then screw the feet into the amplifier (remove the small rubber feet first if necessary). Attach the small felt pads to the bottom of the spike feet cups and place these cups under the spike feet.

FACILITIES & CONNECTIONS

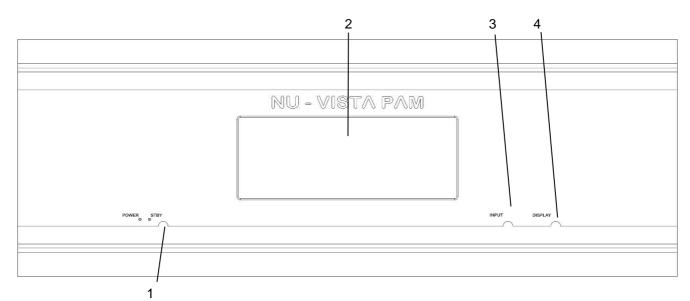

- 1 **POWER/STANDBY** Button
- 2 DISPLAY


- 3 **SOURCE** selector
- 4 **DISPLAY** control

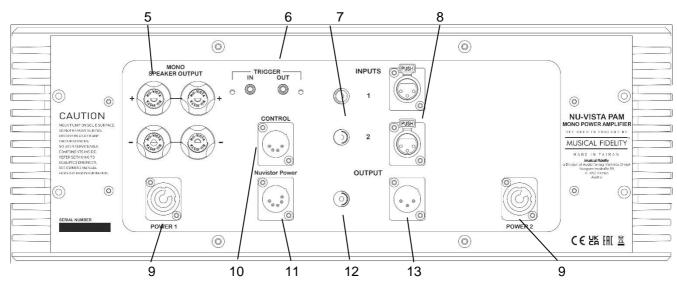

1

- **5 LOUDSPEAKER OUTPUT**
- 6 TRIGGER input and output
- 7 RCA SINGLE ENDED inputs 1 & 2
- 8 XLR BALANCED inputs 1 & 2
- 9 POWER 1 / 2 "Neutrik" power inputs
- 10 CONTROL 4-pin XLR power input
- 11 Nuvistor Power 5-pin XLR power inputs
- 12 RCA SINGLE ENDED line output
- 13 XLR BALANCED line output

XLR Balanced input and output lead connections:



(for reference, no XLR signal leads supplied)


Pin functions:

- Ground (cable shield)
- 2 Normal polarity ("hot" or "+")
- 3 Inverted polarity ("cold" or "-")

FACILITIES & CONNECTIONS



1 POWER/STANDBY LED's

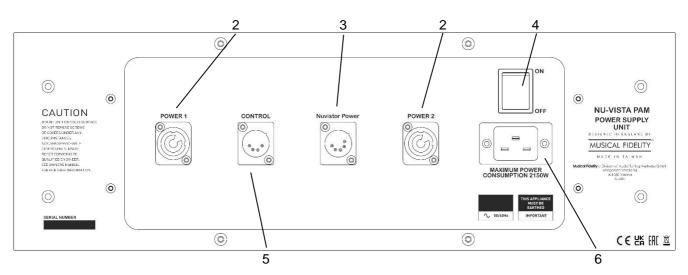

- 2 **POWER 1 / 2** "Neutrik" power outputs
- 3 **Nuvistor Power** 5-pin XLR power output
- 4 **ON/OFF** switch
- 5 **CONTROL** 4-pin XLR power outputs
- 6 IEC 16A mains socket

Starting

Once all connections are made, switch on the **Nu-Vista PAM PSU** unit, using the **POWER** switch on the back panel. The **Standby** LEDs on both the **Nu-Vista PAM and PSU** will light up. The **Nu-Vista PAM** amplifier unit may now be switched fully on using the **POWER/STANDBY** button on the front of the amplifier. The display will now light up and the **POWER LEDs** on both units will light up. The LEDs illuminating the Nuvistor valves will light up **RED**. This means the speaker outputs are muted, and will remain in this state for about 12 seconds, so no sound will be heard from the speakers. Once the delay is up, these LEDs go **ORANGE**, indicating the unit is ready for use, and any source material selected and playing will be heard through the speakers. For the first 15 mins or so, the Nu-Vista valves are still warming up, and their LEDs stay **ORANGE**. After approx. 20 mins the valves will have reached full thermal equilibrium and are at their best performance, which is indicated by their LEDs turning **BLUE**.

Switching Inputs

Switch through the inputs by pressing the **INPUT** button.

Display Controls

Access the **display controls** by pressing the **DISPLAY** button once and then:

Change the **theme** between black/white, VU meters on/off by pressing the **DISPLAY** button.

Change the **brightness** by pressing the **POWER** (brightness down) and **INPUT** (brightness up) buttons.

Display controls will automatically exit after not pressing any buttons for a few seconds.

Pressing and holding the **DISPLAY** button for a few seconds will **turn off** the Nuvistor LEDs. This only works after the valves have fully warmed up and their LEDs changed from orange to **BLUE**.


If the valve **LEDs are turned on**, you can recognize this by a thin blue line that is shown at the top of the display screen.

If the valve LEDs are turned off, this thin blue line is not shown.

POWER OFF CAUTION:

The correct power off procedure should be followed in order to prevent unnecessary power surges on the mains line and to protect the Nu-Vistas. The **Nu-Vista PAM** amplifier itself should be switched OFF first by the **POWER/STANDBY** button on its own front panel. Only then turn off the **Nu-Vista PAM PSU** on its back panel. For day-to-day operation both the **Nu-Vista PAM and PAM PSU** can simply be switched to ON or into STANDBY using the **POWER/STANDBY** button on the Nu-Vista PAM front panel.


Simple speaker lead wiring

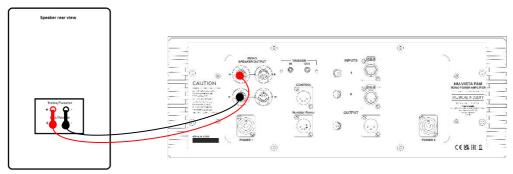

Bass/treble terminal links in

(source and mains leads omitted for clarity)


Speaker lead bi-wiring

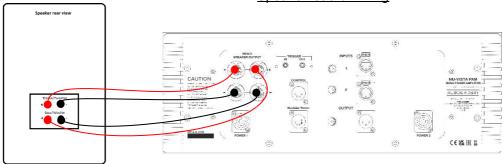

Bass/treble terminal links removed

(source and mains leads omitted for clarity)

Speaker bi-amping (requires additional power amplifier)

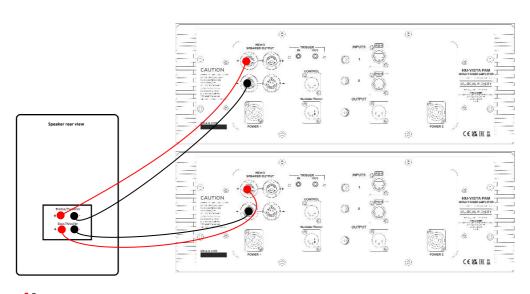

Bass/treble terminal links removed

(source and mains leads omitted for clarity)

PROBLEMS?

Basic problem-solving with an amplifier is similar to troubleshooting other electrical or electronic equipment. Always check the most obvious possible causes first, such as the following examples:

Problem	Probable Cause	Remedy
No power when POWER button is pressed.	Mains power plug is not fully inserted into rear socket. Power cables between amp and PSU not correctly connected.	Plug in securely. Connect PA, Control and Nuvistor PRE power cables.
No sound	Unit is starting up, valves are still heating up. Wrong connections between input sources and the unit Speakers not connected, or incorrectly wired	Wait until unit is started up correctly, see page 10. Check audio input lead connections. Check speaker cables.
Sound cut	Loose connection Output overload or short circuit	Check speaker and input connections. Switch unit off. Check speaker connections for shorting strands or wires. When all has been double-checked reduce volume and switch unit back on. N.B. Take great care when bi-wiring or biamping that speaker bass and treble linking straps are removed; see speaker manual for more information.
Sound is not precise, lacking in bass and stereo image.	Speakers are connected out of phase, i.e., connections to one speaker (+ and –) are reversed.	Ensure speakers are connected with same polarity at amplifier and speaker ends.
Hum.	Audio connector plug not fully pushed in Cable Fault Unsuitable cable (e.g. cable grounds not connected)	Insert plug securely. Check cable is connected at both ends. N.B. Some esoteric cables have internal wiring intentionally disconnected/modified. For best results on all inputs analogue AND digital, please use good quality screened coax; signal and screens both separately connected at both ends.
No audio output, or too low level output.	Incorrect or missing connections	Check connections and make sure they are secure.
LEDs are not lighting up.	LEDs can be turned off, in case they are too bright for dark rooms. Power switch on Nu-Vista PSU is OFF	See page 10 for display controls. See page 10 for starting up.

If none of these actions affect a cure, please contact the dealer, or an authorised Musical Fidelity service agent. Remember; never open the case of the Nu-Vista PAM and Nu-Vista PAM PSU, as this will invalidate the guarantee.

SPECIFICATIONS

Output power >600W per channel into 8 Ohms

Output voltage 69 Volts RMS, 20Hz to 20 kHz; onset of clipping

Output current 150 Amps peak to peak

Damping factor 180

Output devices 5+5 pairs per channel

Gain 16x (23.5dB)

THD+N < 0.003 % typical, 20Hz to 20 kHz

Signal / noise ratio > 108dB 'A'-weighted

Channel separation N/A (mono)
Input impedance 100 k Ohms
Input sensitivity for full output 4.3 Volts RMS

Frequency response + 0, -1dB, 5Hz to 50 kHz

Connections

Line level inputs 2 line level single ended RCA connectors

2 line level balanced XLR connectors

Line level outputs 1 line level single ended RCA connectors

1 line level balanced XLR connectors

Speaker outputs 2 pairs 4mm banana plug/binding posts

Trigger input and output 3.5mm mono jack socket

Trigger level $\pm 5V$ to $\pm 12V$

Power requirement

Mains voltages 115/230VAC 50/60Hz (factory pre-set)

100VAC 50/60Hz (alternative)

Consumption <0.5W in standby mode

130W on and idle 2150W maximum

Weight

Nu-Vista PAM unit only, unboxed 27 kg
Nu-Vista PAM in shipping carton 35 kg
Nu-Vista PAM PSU unit only, unboxed 40 kg
Nu-Vista PAM PSU in shipping carton 50 kg

Maximum Dimensions

Nu-Vista PAM (WxHxD) 483 x 187,5 x 475 (494 with connectors) mm Nu-Vista PAM PSU (WxHxD) 483 x 187,5 x 475 (478 with connectors) mm

Standard accessories

1x IEC type mains lead 16-Amp type 2x POWER power cable (1 m length) "Neutrik" type 1x Nuvistor PRE power cable (1m length) 5-pin XLR 1x Control power cable (1m length) 4-pin XLR

8x Spike Foot Cup 8x Spike Foot Cup 8x Spike Foot Screw

8x Felt pad for Spike Foot Cup 8x Felt pad for Standard Foot

ox Felt pad for Standard Foot

Musical Fidelity reserves the right to make improvements which may result in specification or feature changes without notice.

 ϵ

MANUAL HISTORY **DISPOSAL INFORMATION**

RELEASE	DATE	CHANGES
Nu-Vista PAM & PAM PSU	25 th November 2022	1 st issue



DISPOSAL

The crossed out wheeled bin label that appears on the back panel of the product indicates that the product must not be disposed of as normal household waste. To prevent possible harm to the environment please separate the product from other waste to ensure that it can be recycled in an environmentally safe manner. Please contact local government office or retailer for available collection facilities.

DISPOSITION La poubelle sur roulettes barrées X, qui apparaît en logo sur le panneau arrière du produit, indique que celui-ci ne doit pas être traité comme un déchet domestique commun. Afin de protéger l'environnement, ce produit électronique devra être géré séparément et donc recyclé selon les nouvelles normes Européennes Rohs concernant les déchets d'appareils électroniques. Prière de contacter les services concernés gouvernementaux ou votre point de vente pour

l'élimination et l'enlèvement de déchets électroniques équipés de composants électroniques.

La etiqueta cruzada hacia fuera del compartimiento que aparece en el panel trasero del producto indica que el producto no se debe reciclarse como basura normal de la casa. Para prevenir daños posible al ambiente separe por favor el producto de otra basura para asegurarse de que puede ser reciclada de una manera ambientalmente segura. Entre en contacto por favor a su oficina gubernamental local o a su minorista para las instalaciones disponibles de la colección.

RIFIUTI L'etichetta del cassonetto barrato riportato sul retro dell'apparecchio indica che il prodotto non deve essere smaltito tramite la procedura normale di smaltimento dei rifiuti domestici. Per evitare eventuali danni all'ambiente, separare questo prodotto da altri rifiuti domestici in modo che possa venire riciclato in base alle procedure di rispetto ambientale. Per maggiori dettagli sulle aree di raccolta disponibili, contattate l'ufficio govenativo locale od il rivenditore del prodotto.

FACHGERECHTE ENTSORGUNG:

Das auf der Geräterückseite angebrachte Label deutet darauf hin, dass das Produkt nicht mit konventionellem Hauskehricht entsorgt werden darf. Um Schäden und Verschmutzungen an Umwelt und Mensch zu vermeiden, muss das Produkt fachgerecht entsorgt und von anderem Abfall getrennt werden. Wenden Sie sich bei Fragen hierzu an Ihren Fachhändler oder an eine öffentliche Informationsstelle.

AFVAL

Het label op de achterzijde van dit apparaat, een afvalbak op wielen met een kruis doorgehaald, geeft aan dat dit apparaat niet samen met gewoon huishoudafval mag worden weggegooid. Om mogelijke schade aan onze leefomgeving te voorkomen dient dit apparaat, gescheiden van gewoon huishoudelijk afval, te worden afgevoerd zodat het op een milieuvriendelijke manier kan worden gerecycled. Neem voor beschikbare inzamelplaatsen contact op met uw gemeentelijke reinigingsdienst of met uw elektronica leverancier.

HÄVITTÄMINEN

Yliruksattua jäteastiaa kuvaava tarra tuotteen takalevyssä kertoo, että tuotetta ei saa käsitellä normaalina talousjätteenä. Ympäristön suojelemiseksi on tuote pidettävä erillään muusta jätteestä ja se on kierrätettävä ekologisesti kestävällä tavalla. Ota yhteyttä laitteen myyjään tai Pirkanmaan Ympäristökeskukseen lähimmän kierrätyskeskuksen lövtämiseksi.

AFSKAFNING

Logoet med en skraldespand med kryds over på bagsiden af apparatet indikerer at dette produkt ikke må kasseres som normal husholdningsaffald. For at forebygge mulig skade på miljøet, bedes De separere dette produkt fra andet affald, og sikre at det bliver genbrugt på en miljørigtig måde. Kontakt venligst de lokale myndigheder eller din forhandler for oplysning om nærmeste tilgængelige opsamlingssted for elektronikaffald.

ΔΙΑΔΙΚΑΣΙΑ ΑΠΟΡΡΙΨΗΣ

ΤΟ ΣΗΜΑ ΜΕ ΤΟΝ ΔΙΑΓΕΓΡΑΜΜΕΝΟ ΤΡΟΧΗΛΑΤΟ ΚΑΔΟ ΑΠΟΡΡΙΜΑΤΩΝ ΣΤΗΝ ΠΙΣΩ ΟΨΗ ΤΟΥ ΜΗΧΑΝΗΜΑΤΟΣ

ΔΗΛΩΝΕΙ ΟΤΙ ΤΟ ΠΡΟΙΟΝ ΑΥΤΟ ΔΕΝ ΠΡΕΠΕΙ ΝΑ ΔΙΑΧΕΙΡΙΣΘΕΙ ΣΑΝ ΣΥΝΗΘΙΣΜΈΝΟ ΟΙΚΙΑΚΌ ΑΠΟΒΛΗΤΟ. ΠΡΟΣ ΑΠΟΦΥΓΗ ΕΝΔΕΧΟΜΕΝΗΣ ΕΠΙΒΑΡΥΝΣΗΣ ΤΟΥ ΠΕΡΙΒΑΛΛΟΝΤΟΣ. ΞΕΧΩΡΙΣΤΕ ΤΟ ΠΡΟΙΟΝ ΑΠΟ ΤΑ ΑΛΛΑ ΑΠΟΡΡΙΜΑΤΑ ΩΣΤΕ ΝΑ ΕΞΑΣΦΑΛΙΣΘΕΙ Η ΑΝΑΚΥΚΛΩΣΗ ΤΟΥ ΜΕ ΤΟΝ ΠΡΕΠΟΝΤΑ ΤΡΟΠΟ.

ΠΑΡΑΚΑΛΟΥΜΕ ΝΑ ΕΠΙΚΟΙΝΩΝΗΣΕΤΕ ΜΕ ΤΗΝ ΤΟΠΙΚΗ ΥΠΗΡΕΣΙΑ ΑΝΑΚΥΚΛΩΣΗΣ Η ΜΕ ΤΟ ΚΑΤΑΣΤΗΜΑ ΑΓΟΡΑΣ ΓΙΑ ΠΕΡΙΣΣΟΤΕΡΕΣ ΛΕΠΤΟΜΕΡΕΙΕΣ.

MUSICAL FIDELITY

Musical Fidelity

a Division of Audio Tuning Vertriebs GmbH Margaretenstraße 98, A-1050, Vienna, Austria

www.musicalfidelity.com

Specifications and details are correct as we go to press, but in the interests of product improvement they may be subject to change during manufacture.